


1

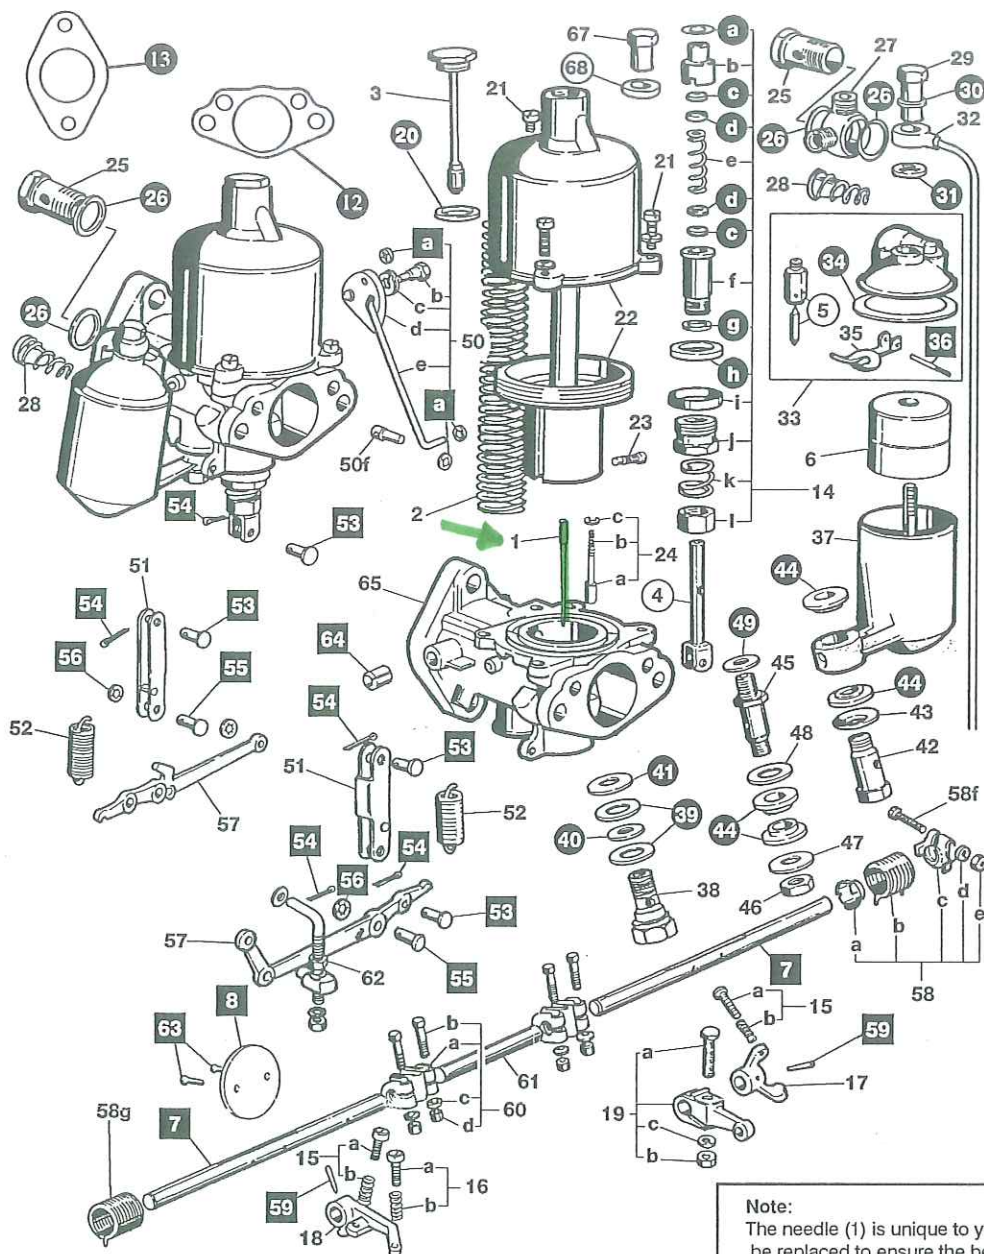

● Gasket Pack

○ Service Kit (CSK) in addition to Gasket Pack

■ Rebuild Kit (CRK) in addition to CSK

Each kit contains enough components to service one carburettor.
The pair of carburetters illustrated are H4 but most H types are similar.

Note:

The needle (1) is unique to your car and should be replaced to ensure the best results (see catalogue). The spindle supplied may be longer than necessary and should be cut to length of original. To ensure that the spindle bushes are a correct fit, great care must be taken to line/ream the body of the carburettor:

8mm - 1/4" diameter spindle

9.5mm - 5/16" diameter spindle

- | | | | |
|---------------------------------|----------------------------------|----------------------|--|
| 1 Needle | 16 Fast Idle Screw Kit | 35 Float Lever | 55 Pivot Pin alternative to 53 |
| 2 Piston Spring | a Fast Idle Adjusting Screw | 36 Float Lever Pin | 56 Starlock Washer use with 55 |
| 3 Damper | b Spring | 37 Float Chamber | 57 Jet Lever |
| 4 Jet Assembly | 17 Throttle Stop | 38 Holding Up Bolt | 58 Throttle Return Spring Kit |
| 5 Needle and Seat Kit | 18 Fast Idle/Stop Lever | 39 Fibre Washer | a Spring Anchor |
| 6 Float Kit | 19 Throttle Lever | 40 Brass Washer | b Left Hand Spring |
| 7 Throttle Spindle Kit | a Bolt | 41 Fibre Washer | c Retaining Clip |
| 8 Throttle Disc Kit | b Nut | 42 Holding Up Bolt | d Washer |
| 12 Gasket - Air Inlet | c Washer | 43 Dished Washer | e Nut |
| 13 Gasket - Engine Flange | 20 Fibre Washer | 44 Rubber Grommet | f Bolt |
| 14 Jet Bearing Kit | 21 Suction Chamber Screws | 45 Holding Up Stud | g Right Hand Spring |
| a Top Bearing Washer | 22 Suction Chamber - Piston Assy | 46 Nut | 59 Taper Pin |
| b Top Bearing | 23 Needle Lock Screw | 47 Steel Washer | 60 Coupling Assembly |
| c Cork Gland | 24 Lift Pin Kit | 48 Steel Washer | a Coupling |
| d Washer Gland | a Lift Pin | 49 Fibre Washer | b Bolt |
| e Spring | b Spring | 50 Fast Idle Cam Kit | c Washer |
| f Bottom Bearing | c Circlip | a Starlock Washer | d Nut |
| g Bottom Bearing Washer | 25 Banjo Bolt | b Pivot Bolt | 61 Throttle Connecting Rod |
| h Cork Gland | 26 Banjo Washers | c Spring Washer | 62 Choke Connecting Link Assy |
| i Sealing Ring | 27 Banjo | d Fast Idle Cam | 63 Disc Screw |
| j Jet Sealing Nut | 28 Filter | e Tension Link | 64 Spindle Bush |
| k Spring | 29 Float Lid Bolt (long) see 67 | f Pivot Pin | 65 Body |
| l Jet Adjusting Nut | 30 Washer | 51 Jet Link | 66 Ignition Union not shown |
| 15 Slow Run Screw Kit | 31 Serrated Washer | 52 Jet Return Spring | 67 Float Lid Fixing Bolt (short) alternative |
| a Throttle Stop Adjusting Screw | 32 Overflow Pipe | 53 Pivot Pin see 55 | 68 Cover Cap use with 67 |
| b Spring | 33 Float Lid Assembly | 54 Split Pin see 56 | |
| | 34 Float Lid Washer | | |